



# Celia New Shower Rail

# Nero

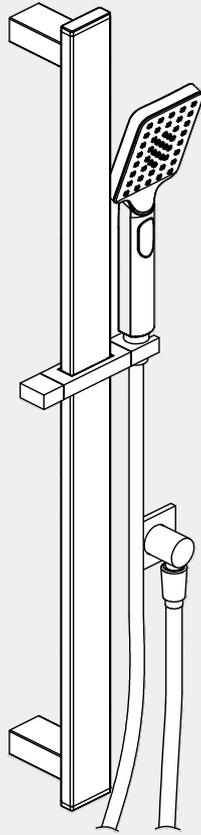

Versions:202401

## Drawing

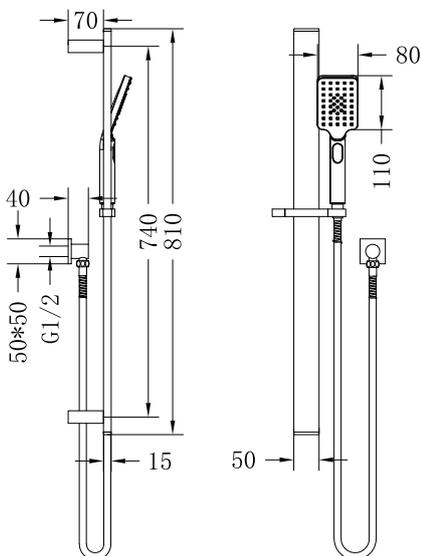

## Specifications

### Watermark License

WM-060093

### Temperature Rating

Min 1°C - Max 75°C

### Pressure Rating

Min 150kpa - Max 500kpa

## Packaging Includes

- 1x Handle Shower (built-in Check Valve)
- 1x Shower Hose
- 1x Elbow
- 1x Shower Rail

## Finish & SKU

Chrome  
NR316CH

Gun Metal  
NR316GM

Brushed Nickel  
NR316BN

Matte Black  
NR316MB


Brushed Gold  
NR316BG

\*Dimensions are nominal measurements only.




use Teflon tape


1. Put Teflon tape on outlet thread.

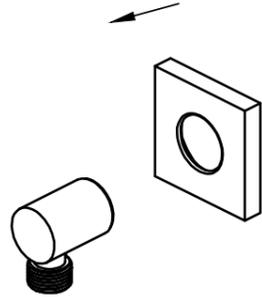



2. Pull dressing ring on the elbow body.

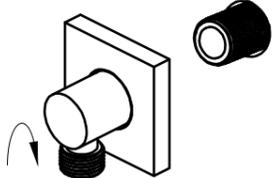


3. Screw elbow body on to outlet.

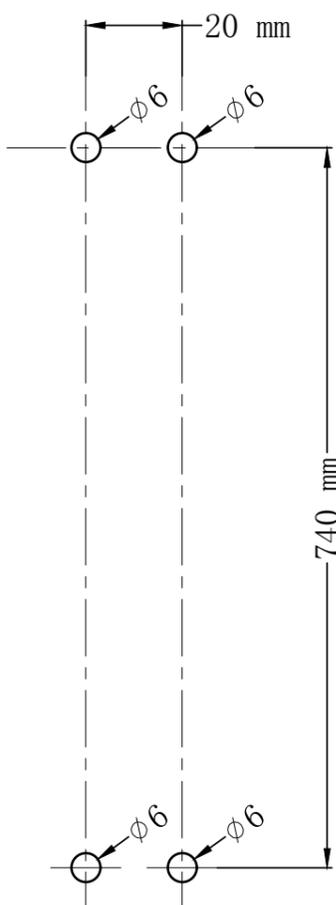


4. Drill four holes according to above picture.

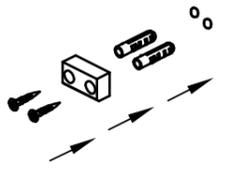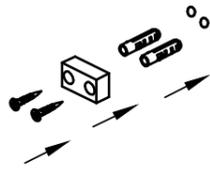
5. Make expansion plug into four holes and make brackets into holes by tapping screw.

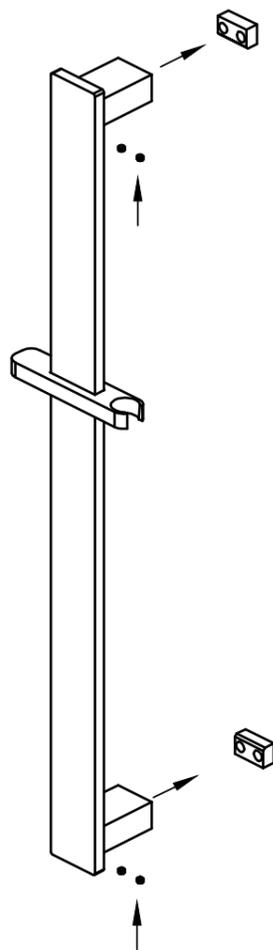

6. Install shower rail onto brackets, tighten four grub screws by hex wrench.

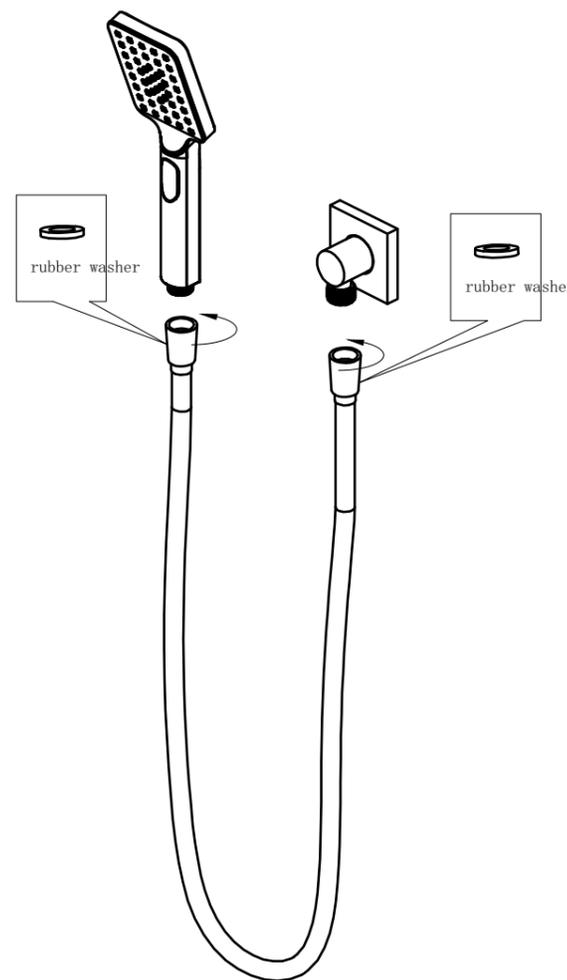

7. Connect hand shower and elbow by shower hose.  
(Notes: there are two rubber washers in shower hose.)

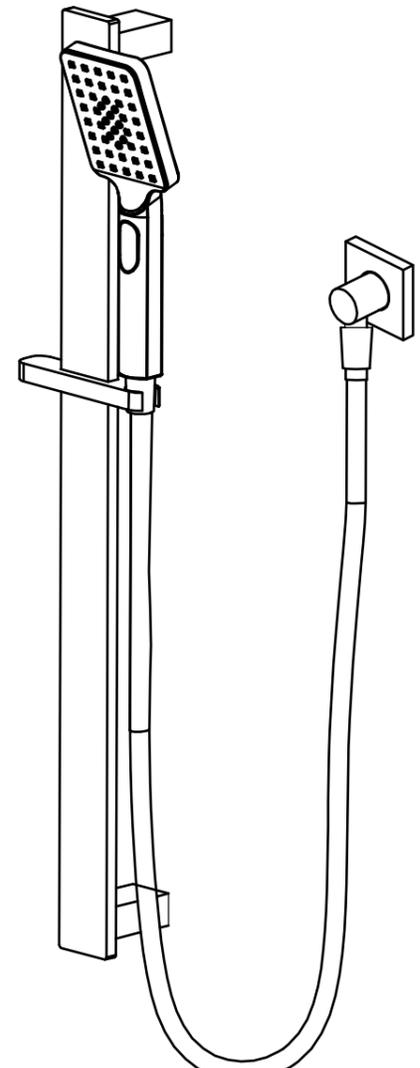

8. Test and check for leaks.

# Nero

info@nerotapware.com.au  
nerotapware.com.au

11-13 Buontempo Road  
Carrum Downs Vic 3201

