



Versions:202311


# **Finish**



# **New Mecca Bathroom Accessories**


#### **ROBE HOOK**

NR2382CH / NR2382MB / NR2382BN NR2382GM / NR2382BG / NR2382BZ




#### **SINGLE TOWEL RAIL 800MM**

NR2330CH / NR2330MB / NR2330BN NR2330GM / NR2330BG / NR2330BZ




# **DOUBLE TOWEL RAIL 800MM**

NR2330dCH / NR2330dMB / NR2330dBN NR2330dGM / NR2330dBG / NR2330dBZ




# **SOAP DISH HOLDER**

NR2381CH / NR2381MB / NR2381BN NR2381GM / NR2381BG / NR2381BZ

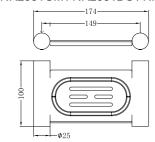


# HAND TOWEL RAIL

NR2380CH / NR2380MB / NR2380BN NR2380GM / NR2380BG / NR2380BZ




#### **SINGLE TOWEL RAIL 600MM**

NR2324CH / NR2324MB / NR2324BN NR2324GM / NR2324BG / NR2324BZ




#### **DOUBLE TOWEL RAIL 600MM**

NR2324dCH / NR2324dMB / NR2324dBN NR2324dGM / NR2324dBG / NR2324dBZ




# **METAL SHOWER SHELF**

NR2387aCH / NR2387aMB / NR2387aBN NR2387aGM / NR2387aBG / NR2387aBZ




# **TOILET ROLL HOLDER**


NR2386CH / NR2386MB / NR2386BN NR2386GM / NR2386BG / NR2386BZ



# **Installation Instruction**

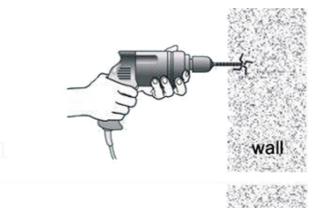


- 1. Put the fixing blocks (piece) over on the right place on the wall, and stay level, use marking pen through the holes of fixing block to mark out fixing spots on the wall. Then drill holes by electric hand drill with 6mm drilling bit on the spots.
- 2. Put the expansion plugs into the wall by hammer.

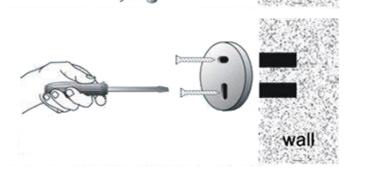


wall

3. Put fixing block cover on the holes and fix firmly by expansion screws.

4. Put the base of bathroom accessory cover on the fixing blocks.



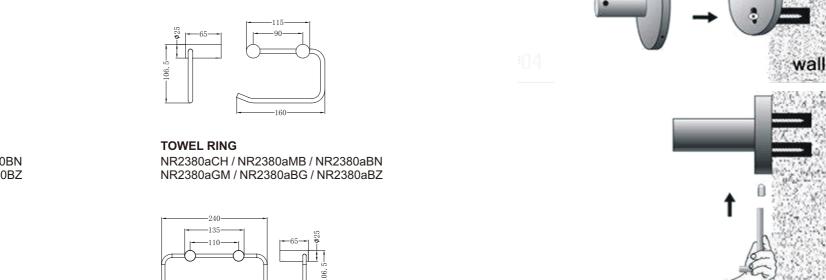

# Nero

